



INSTRUCTIONS



PROPUR™ PROMAX™ SHOWER FILTER WITH MASSAGE HEAD

FOR TECHNICAL SUPPORT PLEASE CALL

1-800-544-3533

OR email:

customerservice@propurusa.com



INTRODUCTION

Thanks for purchasing the Propur™ ProMax™ Shower Filter. Take a shower with the new Propur™ high efficiency ProMax™ shower filter with massage head and *experience the difference*. Features 4 stage filtration process utilizing new RF water filter element technology. Helps protect your skin from unhealthy effects of contaminants that may be in your water. Independent lab test shows the ProMax™ shower filter helps reduce over 200 contaminants including VOC's, heavy metals, pesticides, Chloramines, chlorine, fluoride, herbicides, pharmaceuticals and odor. Helps control scale, algae and bacteria. The ProMax™ comes with a triple function swivel massage shower head rated at 2.5 gpm. The ProMax™ is made from ABS plastic and is BPA free. Best operated at 80 psi and 115° F. Our shower filter is designed to fit 1/2" NPT (National Pipe Thread) standard.

1) Installation

1. Remove your ProMax™ Shower Filter assembly from the package and set aside.

Please note: the ProMax™ comes completely assembled with filter cartridge installed in housing and massage head attached.

2. Remove the existing shower head from the shower arm (pipe) by unscrewing it counter clockwise.

Do not unscrew the shower arm.

3. Insert white washer into female threaded end of shower filter housing (the end that attaches to the shower arm). Extra white washer included.

4. Install the ProMax™ shower filter assembly by turning it clockwise onto the shower arm. Hand tightening is all that is needed.

DO NOT OVERTIGHTEN OR CROSS THREAD.



2) Activation

1. Adjust the shower head so that it points down for now as the first few minutes of water may contain carbon fines which need to be flushed out of the filter before using.

2. Turn on cold water for about 3-5 minutes. You will see an initial rush of carbon in with the water. Once the water is clear, you can swivel the shower head to flush the grey water down the shower floor drain. Loose media fines that have flushed out from the shower filter are normal.

3. To activate, turn off the shower, then turn back on. You are now ready to adjust the water to the desired temperature and rotate the shower head to the desired position. The ProMax™ Shower Filter is now ready to use.

3) Using Your ProMax™

1. The ProMax™ Shower Filter with easy to swivel massage head offers 3 levels of spray; full spray, jet massage, and soft aerated spray through it's anti-clogging nozzle.

Adjust flow pattern setting by rotating adjuster.



4) Changing The Cartridge

1. Unscrew the shower filter assembly from the shower arm by turning counter clockwise.
2. Unscrew the filter housing by placing one hand on top and bottom portion of the filter housing as shown in image B.
3. Remove the cartridge and replace with new cartridge. **Screen mesh must be facing upward.**
4. Make sure o-ring inside of filter housing remains seated in o-ring groove.
5. Screw the housing back together.
6. Reattach back into shower arm.
7. Return to section 2(Activation).
8. No back flushing is required.
9. Filter cartridge is NOT reversible.



We recommend changing the filter cartridge every 6-9 months. Should you use your shower more than once a day and/or take a shower longer than 8 minutes, you may consider changing more frequently to help maintain peak performance.



Trouble Shooting

If there is leakage between the two housings, try tightening both housings. Check the o-ring to make sure it is seated in the groove. The o-ring may need to be lubricated with non-petroleum based lubricant.

5) Changing The Shower Head

Gently using pliers or similar, turn counter clockwise where the arrow is shown in image D.



Do not use with water of unknown water quality or that may be microbologically unsafe without adequate disinfection.



PROPUR™ LIMITED WARRANTY

Lincoln-Remi Group, LLC d/b/a Propur ("PP") sells its products with the intent that they are free from defects. PP warrants to the original retail purchaser/consumer that its products will be free of defects in material and workmanship under normal use for a period one (1) year for the Propur™ ProMax™ Shower Filter and 9 months for the ProMax™ filter cartridge (Warranty Period"). PP will replace or repair any product, at its sole discretion, during the Warranty Period. Any damage caused by misuse or abuse; accident; improper installation; dropped product; failure to provide recommended maintenance; transportation damage; neglect; environmental conditions; or any other conditions whatsoever that are beyond the control of PP are excluded from this warranty. This express limited warranty shall be the sole and exclusive warranty. **ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS OR FITNESS FOR ANY PARTICULAR PURPOSE OR ANY OTHER POTENTIAL OBLIGATION ON THE PART OF PP WITH RESPECT TO PRODUCTS SOLD BY PP ARE DISCLAIMED. EXCEPT FOR ANY EXPRESS WARRANTIES, ALL PROPUR PRODUCTS ARE SOLD "AS-IS"**. PP shall not be held liable for any incidental, consequential or special damages of any sort whatsoever. The liability of PP is limited to the original retail purchaser and to the repair or replacement of defective parts during the Warranty Period. No refunds will be given at any time. The liability of PP terminates upon the expiration of the Warranty Period or transfer of product ownership.

To obtain warranty service on your Propur product, mail the product with your dated sales receipt as proof of purchase, postpaid, to the following address:

Propur, 1200 Benstein Rd, Commerce Twp, MI 48390. NO C.O.D.'s
This warranty provides you with specific legal rights. You may have additional rights which may vary from country to country. Because of individual country laws and regulations, some of the above limitations and exclusions may not apply to you.